















# DVR OPERATIONS






## RECORDING

1. PUSH  THEN HIGHLIGHT CHANNEL
2. USING LEFT/RIGHT   AND UP/DOWN ARROWS   SELECT WHAT YOU WANT TO RECORD
3. PUSH THE  RECORD BUTTON A RED DOT  WILL APPEAR BESIDE THE PROGRAM
4. PUSH THE  BUTTON


## ERASE A RECORDED SHOW

PUSH , USING THE UP/DOWN   ARROWS HIGHLIGHT THE PROGRAM YOU WANT TO CANCEL, WHEN YOU FIND THE PROGRAM YOU WANT TO CANCEL. PUSH  OK/SELECT AND RIGHT ARROW  OVER TO THE  DELETE ICON PUSH  OK/SELECT AND AGAIN TO CONFIRM YOU WISH TO ERASE THE PROGRAM AND PUSH THE  EXIT.












## PLAY RECORDING

1. PUSH  AND HIGHLIGHT THE PROGRAM YOU WANT TO WATCH BY USING THE UP/DOWN   ARROWS
2. PUSH  PLAY TO WATCH THE PROGRAM
3. TO STOP THE PROGRAM PUSH THE  EXIT BUTTON
4. THE RECORDING WILL STILL BE IN MEMORY FOR LATER VIEWING





## STOP RECORDING

1. PUSH  GUIDE THEN HIGHLIGHT CHANNEL
2. USING LEFT/RIGHT   AND UP/DOWN ARROWS   SELECT WHAT YOU PREVIOUSLY SELECTED TO RECORD
3. PUSH THE  RECORD BUTTON ARROW DOWN  TO STOP  THE RECORDING
4. PUSH  THE  BUTTON

















## TO SAVE A RECORDING

PUSH , USING THE UP/DOWN   ARROWS HIGHLIGHT THE PROGRAM, PUSH  OK/SELECT THEN RIGHT ARROW  OVER TO THE  EXCLAMATION POINT AND PUSH  OK/SELECT, USING THE RIGHT ARROW  CHOOSE "SPACE NEEDED" OR "I DELETE", ARROW DOWN  TO CONFIRM, PUSH  OK/SELECT AND THEN  EXIT.

## PAUSING LIVE TV




1. PRESS  PAUSE TO PAUSE PROGRAM
2. PRESS  PLAY TO RESUME WATCHING THE PROGRAM
3. PUSH  FAST FORWARD TO SKIP THROUGH COMMERCIALS
4. PUSH  TO RETURN TO LIVE PROGRAMMING

## SCHEDULING A SERIES RECORDING

1. PUSH  GUIDE
2. USING THE UP/ DOWNARROWS   HIGHLIGHT THE SHOW YOU WANT TO RECORD
3. PUSH  INFO
4. RIGHT ARROW  OVER TO THE RECORD ICON 
5. PUSH  OK/SELECT
6. ARROW DOWN  TO  TO CREATE A SERIES RECORDING
7. PUSH  OK/SELECT
8. SET THE SETTINGS WITH THE RIGHT ARROW  TO YOUR CHOICE OF  
 “ONLY NEW EPISODES”  
 “NEW AND REPEATS”  
 “ALL WITH DUPLICATES”
9. ARROW DOWN  TO SAVE  
 “ALL EPISODES”  
 “ONLY 1-7 EPISODES”
10. ARROW DOWN  TO SAVE  
 “SPACE IS NEEDED”  
 “I DELETE”
11. ARROW DOWN  TO RECORD SERIES WITH THE OPTIONS YOU JUST SET
12. PUSH  OK/SELECT
13. PUSH  EXIT.

## MODIFYING/CANCEL SERIES RECORDINGS

1. PUSH  MENU TO ACCESS THE QUICK MENU.
2. USING THE RIGHT ARROW , HIGHLIGHT THE  ICON
3. PRESS  OK/SELECT
4. USING THE RIGHT  AND DOWN  ARROWS TO HIGHLIGHT THE BOX “SERIES RECORDINGS”
5. PRESS  OK/SELECT
6. USE THE UP  AND DOWN  ARROWS TO SELECT THE SERIES YOU WISH TO MODIFY/CANCEL
7. PRESS  OK/SELECT
8. USE THE RIGHT  ARROW TO  
 (MODIFY SERIES SETTINGS)  
 (DELETE SERIES RECORDING)  
 APPLY PARENTAL LOCK
9. PRESS  OK/SELECT
10. PRESS THE  WHEN FINISHED WITH CHANGES

**NOTE:** WHEN MODIFYING SETTINGS ARROW DOWN  TO HIGHLIGHT  ‘RECORD SERIES W/ THESE SETTINGS’, PUSH  OK/SELECT BEFORE EXITING THE MENU.

**IF YOU DO NOT CONFIRM THE MODIFICATIONS, THE CHANGES WILL NOT BE STORED**